

CAMSHAFT

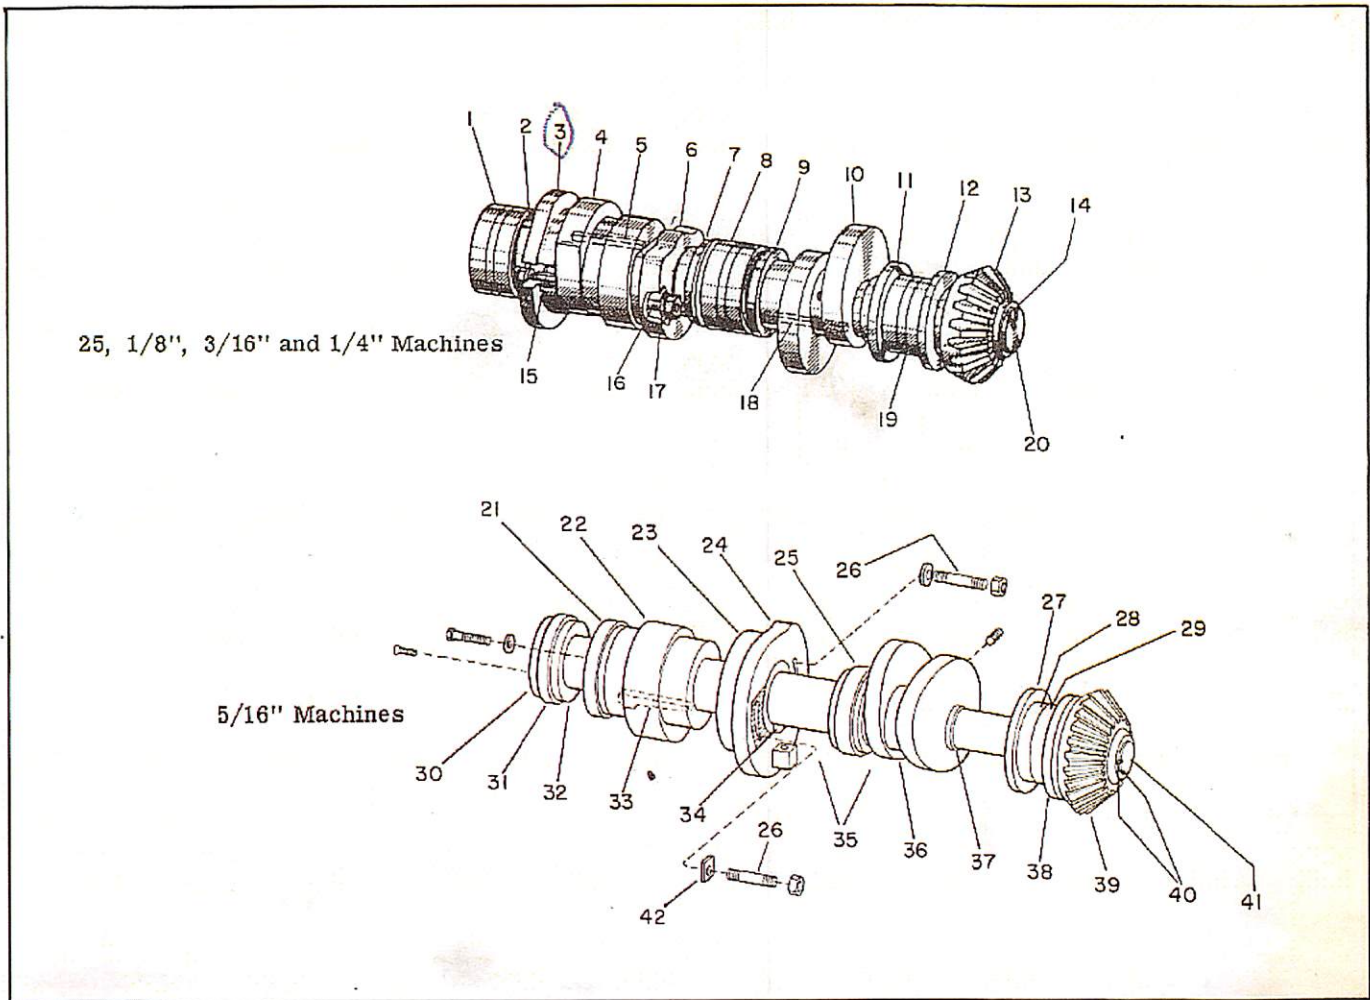


Figure 6

CAMSHAFT

KEY NO.	PART NAME	QTY	KEY NO.	PART NAME	QTY
6-1	Front Roller Bearing	1	6-22	Cutoff Cam	1
6-2	Front Bearing Retainer	1	6-23	Transfer Cam Hub	1
6-3	Pusher Cam	1	6-24	Transfer Cam	1
6-4	Cutoff Cam	1	6-25	Center Roller Bearing	1
6-5	Key for Cutoff Cam	1	6-26	Stud for Transfer Cam	2
6-6	Transfer Cam	1	6-27	Thrust Washer	1
6-7	Front Retainer for Center Bearing	1	6-28	Rear Bearing Spacer	1
6-8	Center Roller Bearing	1	6-29	Rear Roller Bearing	1
6-9	Rear Retainer for Center Bearing	1	6-30	Clamp on Front of Camshaft	1
6-10	Shifter Cam	1	6-31	Front Bearing	1
6-11	Thrust Collar	1	6-32	Retainer for Front Bearing	1
6-12	Rear Retainer for Bearing	1	6-33	Key for Cutoff Cam	1
6-13	Bevel Gear	1	6-34	Key for Transfer Cam Hub	1
6-14	Key for Bevel Gear	1	6-35	Retainers for Center Bearing	2
6-15	Stud for Pusher Cam to Cutoff Cam	2	6-36	Shifter Cam	1
6-16	Stud for Transfer Cam to Cutoff Cam	1	6-37	Key for Shifter Cam	1
6-17	Clamp Washer for Transfer Cam Stud	1	6-38	Thrust Washer Behind Bevel Gear	1
6-18	Key for Shifter Cam	1	6-39	Bevel Gear	1
6-19	Rear Roller Bearing	1	6-40	Keys for Bevel Gear	2
6-20	Cam Shaft	1	6-41	Camshaft	1
6-21	Pusher Cam	1	6-42	Grip Washer for Transfer Cam	1