

CROSS SHAFT

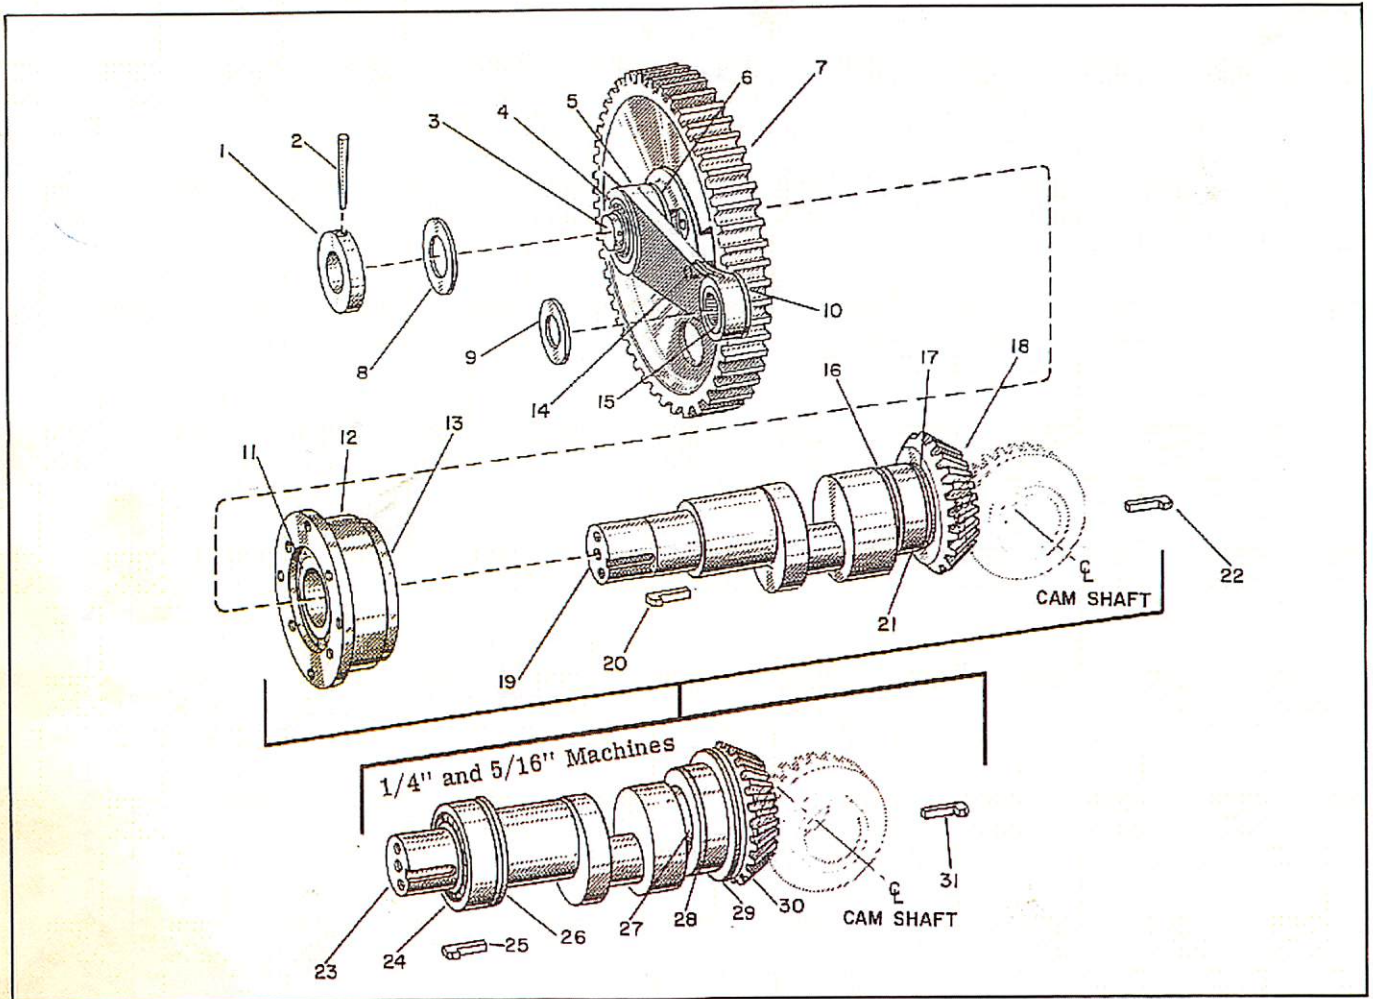


Figure 5

CROSS SHAFT

KEY NO.	PART NAME	QTY	KEY NO.	PART NAME	QTY
5-1	Collar for Feed Crank Disc	1	5-17	Check and Thrust Washer for Bevel Gear	1
5-2	Pin for Feed Crank Collar	1	5-18	Bevel Gear	1
5-3	Feed Crank Disc	1	5-19	Cross Shaft	1
5-4	Bearing in Feed Link - Feed Crank End	1	5-20	Key for Timing Gear on Cross Shaft . .	1
5-5	Feed Link	1	5-21	Roller Bearing on Cross Shaft	1
5-6	Washer on Feed Crank Disc	1	5-22	Key for Bevel Gear on Cross Shaft . . .	1
5-7	Timing Gear on Cross Shaft	1	5-23#	Cross Shaft	1
5-8	Washer on Feed Crank Disc	1	5-24#	Roller Bearing on Cross Shaft	1
5-9	Washer for Feed Link on Feed Lever . .	1	5-25#	Key for Timing Gear on Cross Shaft . .	1
5-10	Washer for Feed Link on Feed Lever . .	1	5-26#	Thrust Washer for Roller Bearing on Cross Shaft	1
5-11	Thrust Bearing on Cross Shaft	1	5-27#	Thrust Bearing on Cross Shaft	1
5-12	Thrust Bearing Housing on Cross Shaft	1	5-28#	Thrust Bearing Clamp Ring	1
5-13	Thrust Bearing Clamp Ring	1	5-29#	Thrust Bearing Housing on Cross Shaft	1
5-14	Dowel for Feed Crank Disc to Timing Gear	2	5-30#	Bevel Gear	1
5-15	Bearing in Feed Link - Feed Lever End	1	5-31#	Key for Bevel Gear on Cross Shaft . . .	1
5-16	Thrust Washer for Roller Bearing on Cross Shaft	1			

#On 1/4" and 5/16" Machines Only