

FEED LEVER ASSEMBLY

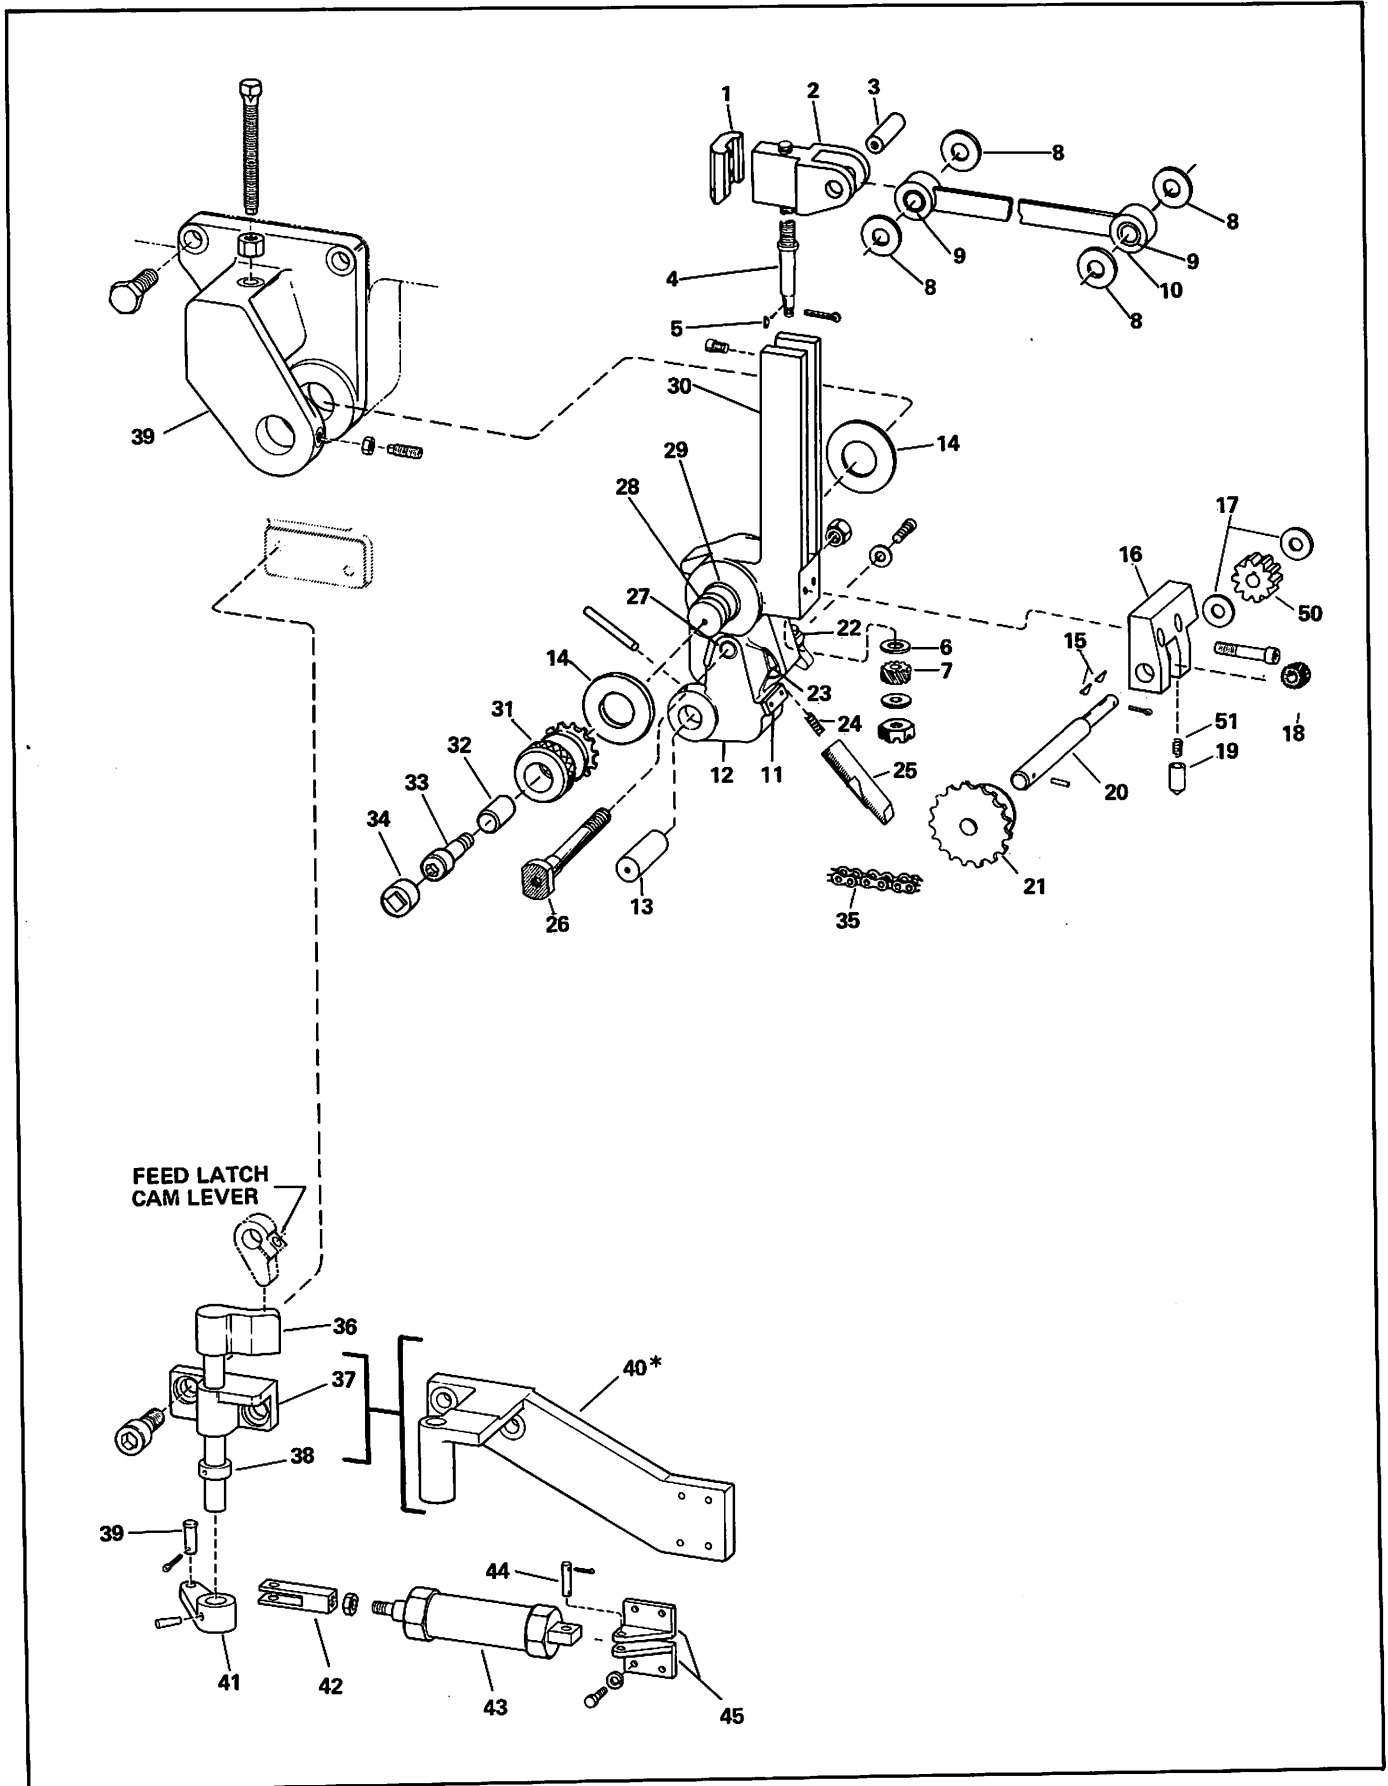


Figure FL

FEED LEVER ASSEMBLY

KEY NO.	PART NAME	QTY.
FL-1	Clamp Plate for Feed Adjusting Nut	1
FL-2	Feed Adjusting Nut	1
FL-3	Feed Connection Pin in Feed Adjusting Nut	1
FL-4	Feed Adjusting Screw	1
FL-5	Key for Feed Adjusting Screw	1
FL-6	Thrust Washer on Feed Adjusting Screw	1
FL-7	Gear on Feed Adjusting Screw	1
FL-8	Washer for Feed Connection	4
FL-9	Bushing in Feed Connection	2
FL-10	Feed Connection	1
FL-11	Feed Latch Block Insert	1
FL-12	Feed Latch Block	1
FL-13	Feed Link Pin in Feed Latchout Block	1
FL-14	Washer on Feed Lever Pivot Pin	2
FL-15	Key for Feed Adjusting Shaft	2
FL-16	Gear Block on Feed Lever	1
FL-17	Washer on Feed Adjusting Shaft	2
FL-18	Gear on Feed Adjusting Shaft	1
FL-19	Feed Lever Catch	1
FL-20	Feed Adjusting Shaft	1
FL-21	Feed Adjusting Sprocket	1
FL-22	Feed Latch Cam Lever	1
FL-23	Feed Latch Cam Dog	1
FL-24	Feed Latch Pin Spring	1
FL-25	Feed Latchout Pin	1
FL-26	Feed Latch Block Pivot Pin	1
FL-27	Bushing in Feed Latch Block	1
FL-28	Feed Lever Pivot Pin	1
FL-29	Bushing in Feed Lever	1
FL-30	Feed Lever	1
FL-31	Feed Adjusting Knob	1
FL-32	Feed Adjusting Bush	1
FL-33	Shoulder Bolt	1
FL-34	Feed Adjusting Knob Socket	1
FL-35	Feed Adjusting Chain	1
FL-36	Feed Latch Cam	1
FL-37	Feed Latch Cam Bracket	1
FL-38	Cam Collar	1
FL-39	Feed Lever Bracket	1
FL-40*	Feed Latch Cam Mounting Bracket	1
FL-41	Arm for Feed Latch Cam	1
FL-42	Clevis for Cylinder, Rod End	1
FL-43	Air Cylinder	1
FL-44	Cylinder Pin	1
FL-45	Air Cylinder Bracket	1
FL-50	Feed Adjustment Lock Collar	1
FL-51	Spring in Catch	1

*68 Header